

ITEM NO.SBRB0947

NOTE:


This brochure contains IMPORTANT safty info. Please read and keep for future reference.

MAINTAINANCE AND WARNING


- 1. Keep furniture away from heat sources.
- 2.Do not clean furniture with harsh cleaner or polishes.Do not use detergents, solvents, abrasives, spray packs or leather cleaner. Use non-color mild soap with warm water to clean spills (Mix 1:10 soap to water).
- 3.Do not place furniture under direct sunlight, material will possibly fade over time.
- 4.Do not use on site dry cleaning machine. Children should not climb or jump on the furniture.
- 5.Do not write on furniture that is not protected by a padded barrier.
- 6. Not for commercial use, only for residential use.




EXPLOSIVE VIEW

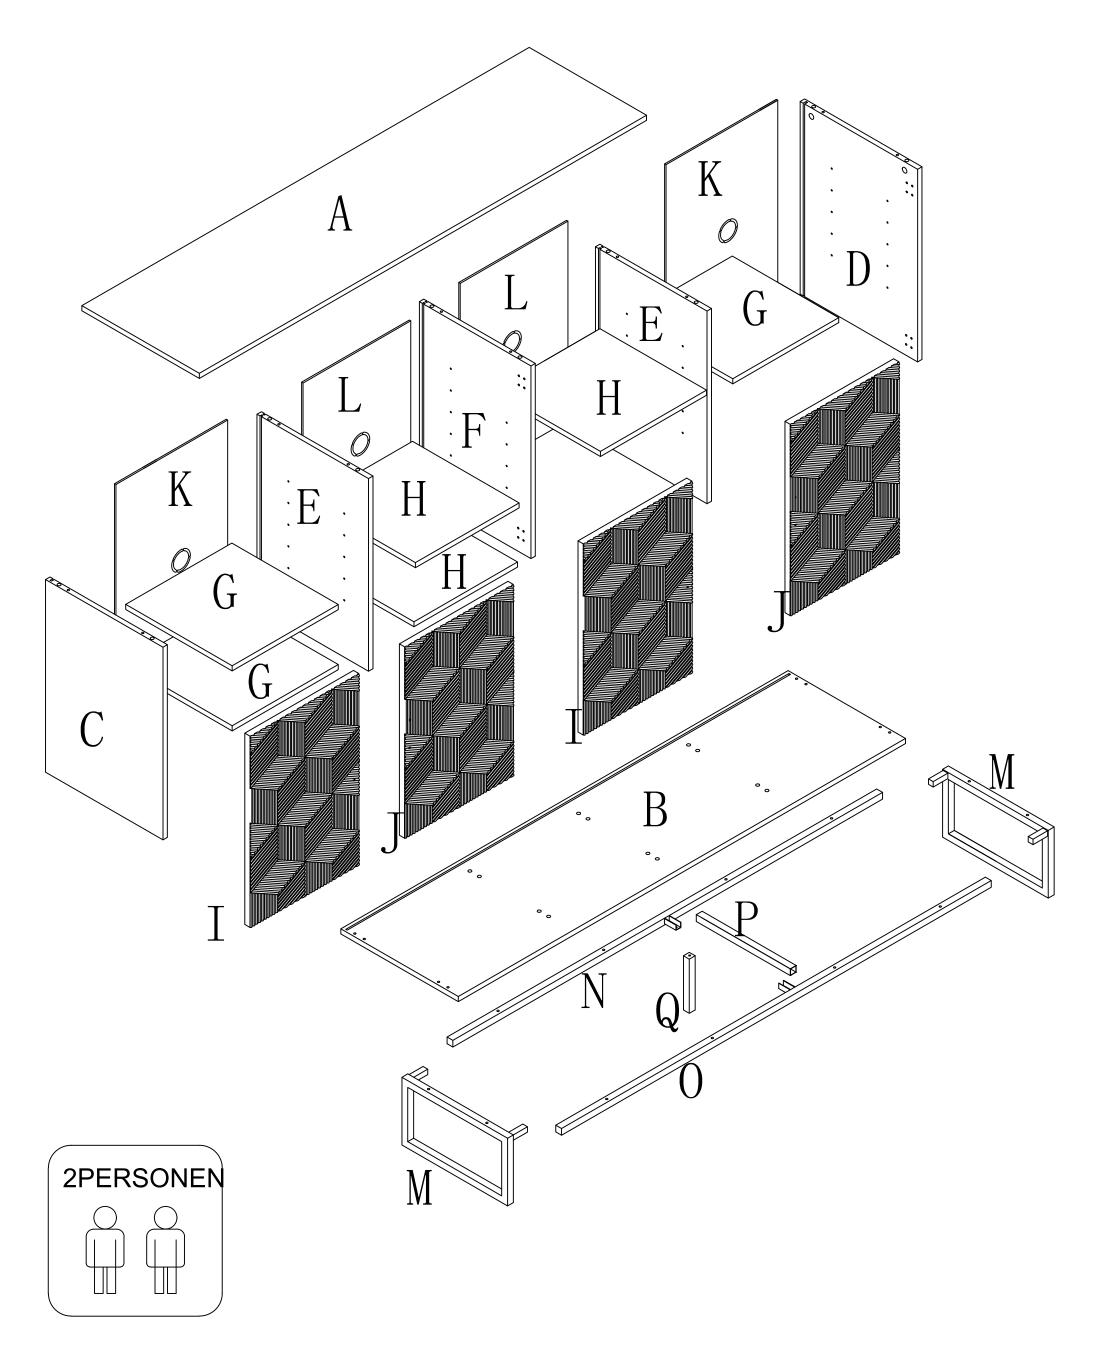


PARTS LIST

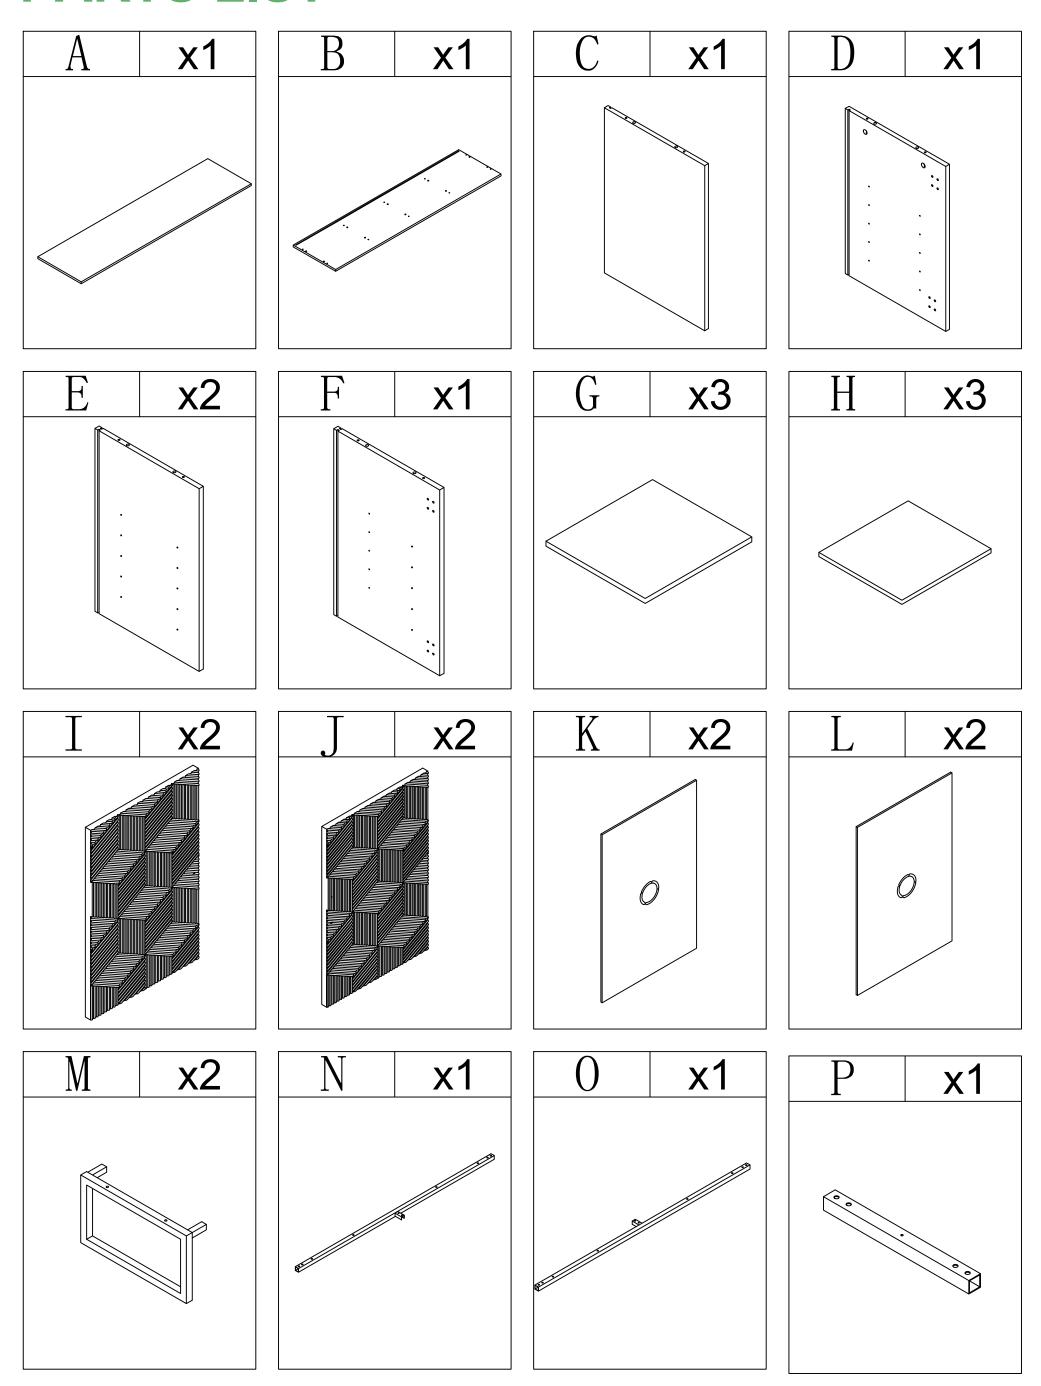


PARTS LIST

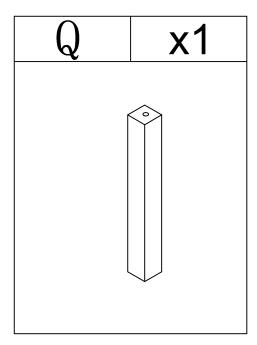


HARDWARE LIST

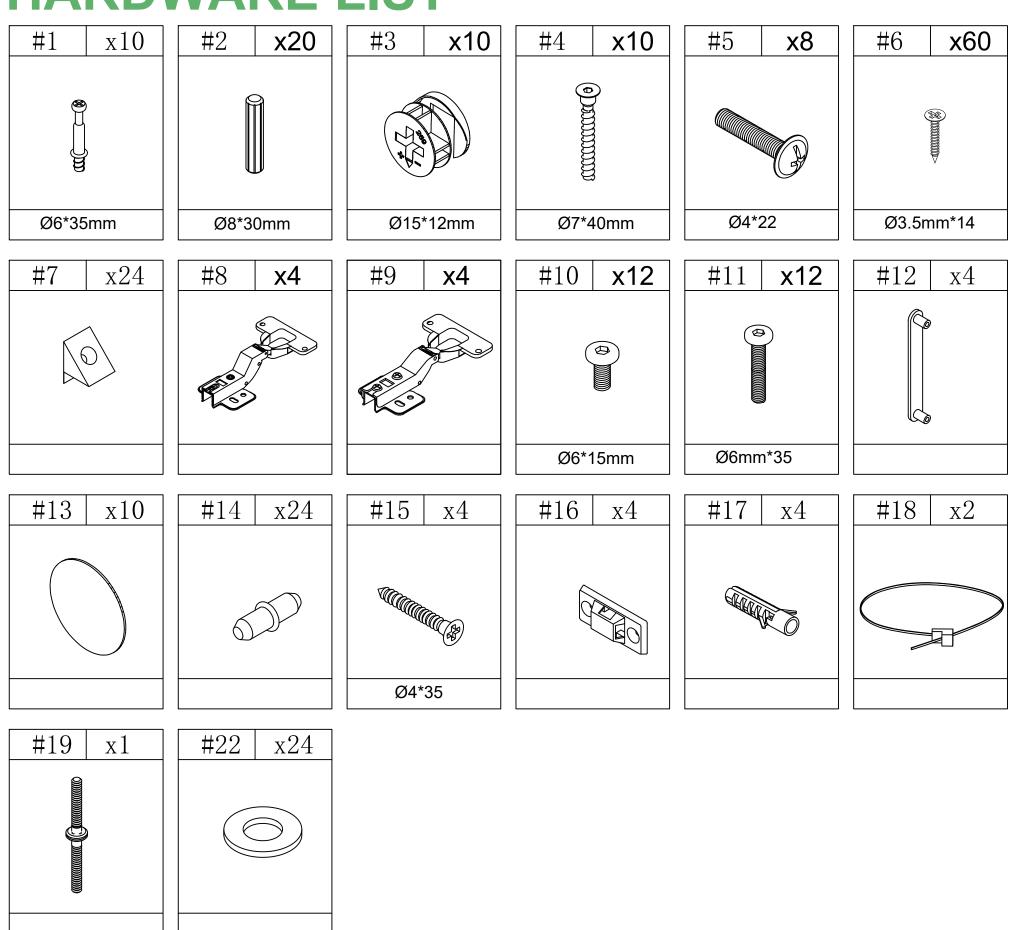



TOOL LIST

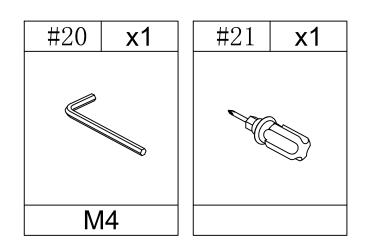


HARDWARE SPARE LIST

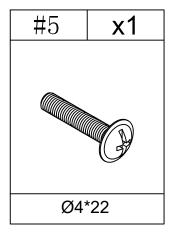

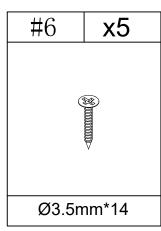


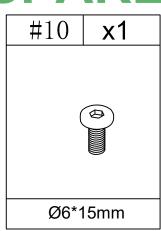

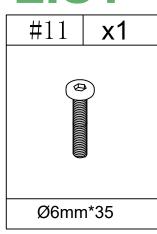


STEP-1

1.Prepare for part A. Align the holes in part A, insert wooden dowel #2 by hand, tighten with screwdriver #21 tighten $\#1_{\circ}$

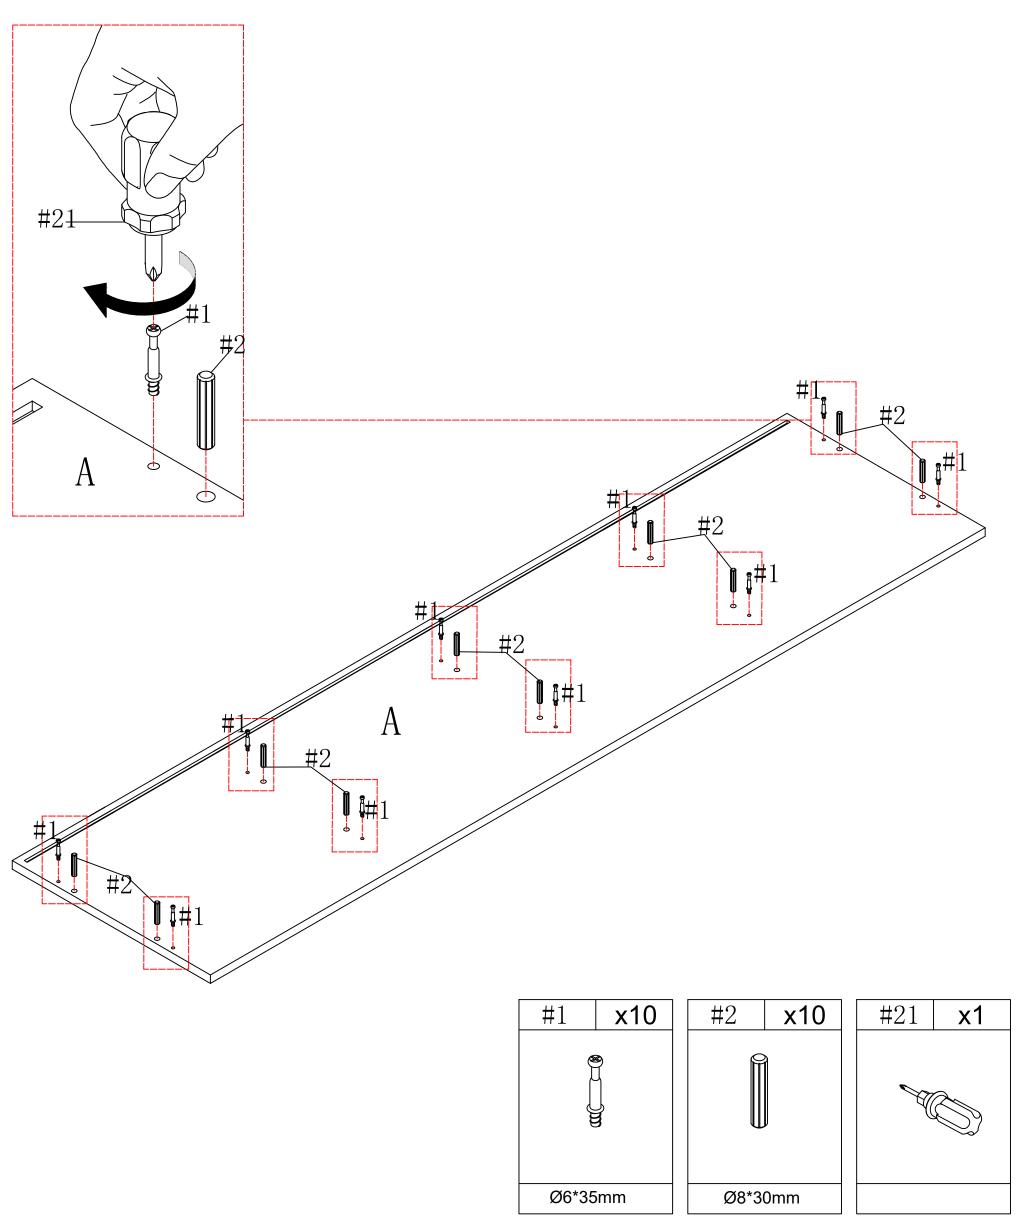


STEP-2

1.Connect the part A with part C&D&E&F. align the hole in the part C&D&E&F,insert the bolt #1 and wooden dowel #2 in part A into part C&D&E&F. insert cam bolt #3 into the corresponding hole of side panel C&D&E&F,and tighten the nuts #3 with a screwdriver #21. After installation, cover the screw holes with #13. Make sure the groove is in same side as picture show.

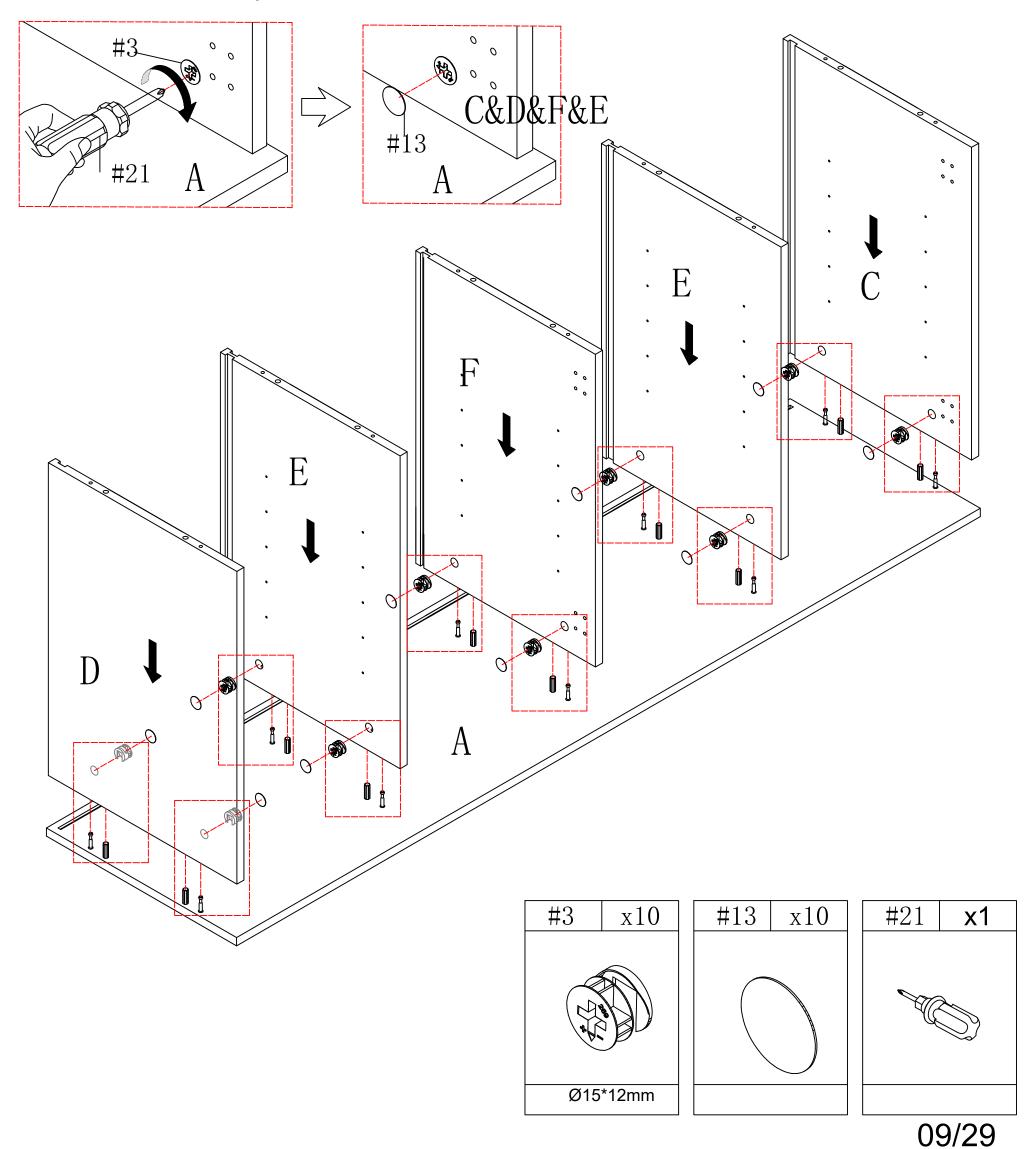


STEP-3


1.slide in the part J,K into the groove in part D,E and E,F and F,E,and C,E . make sure they are also in groove in part A.Insert the wooden dowel #2 into

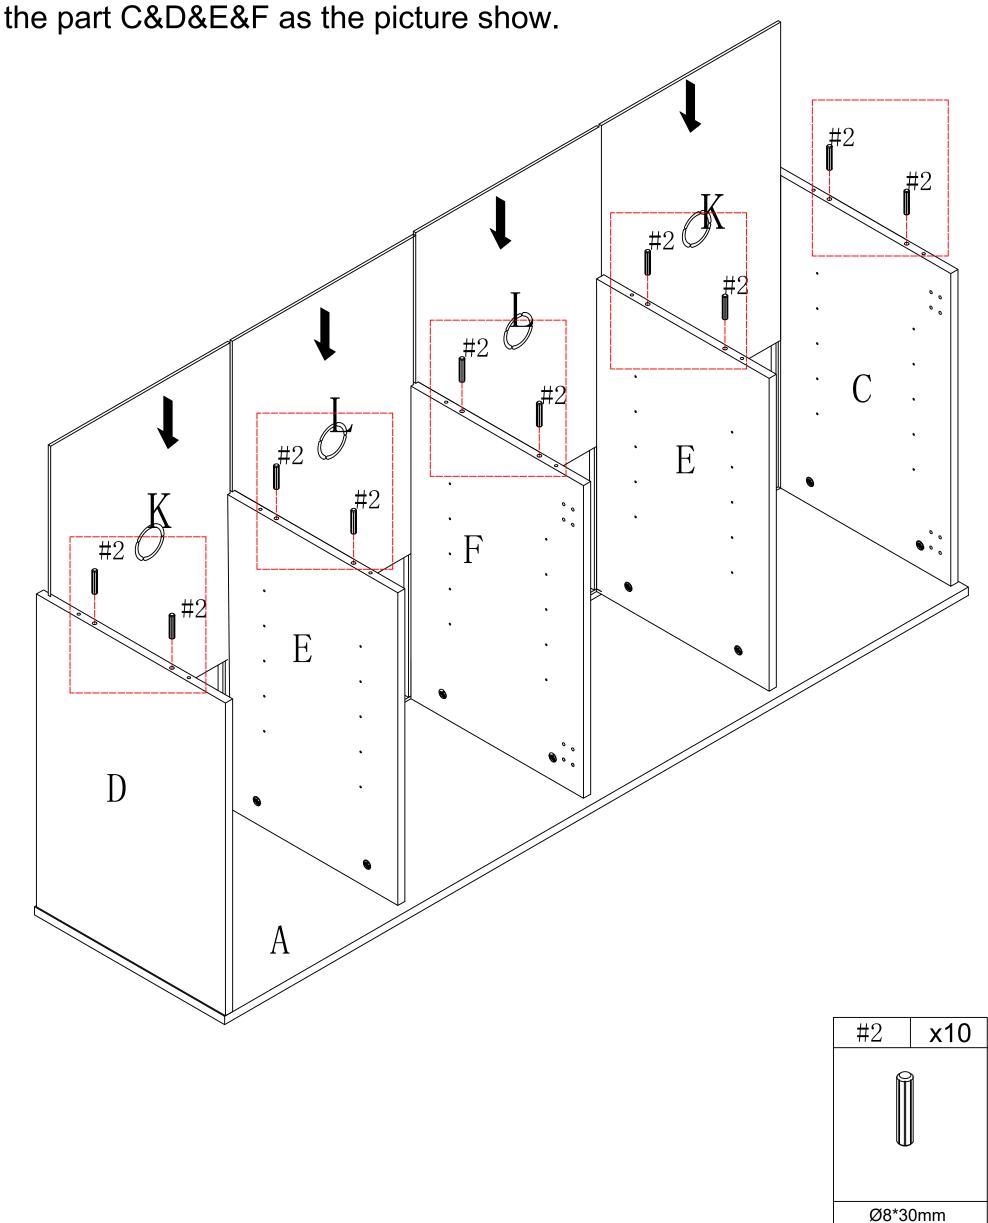

STEP-4

1.Connect the part B the pre-assembled unit in step 3. Then align the holes in part B,Insert screw #4 and push it down so that it connects to parts C&D&E&F. Next,and tighten the screw #4 with an Allen key #20.

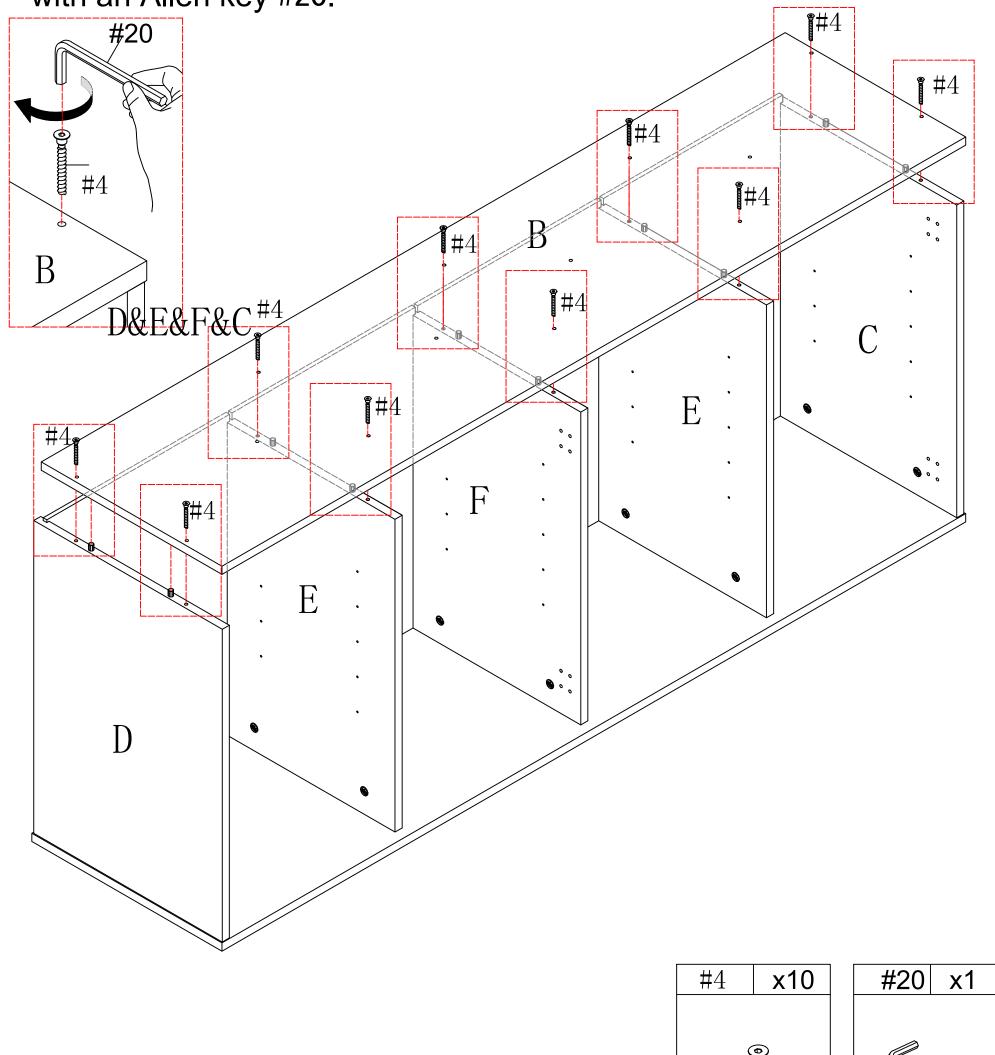

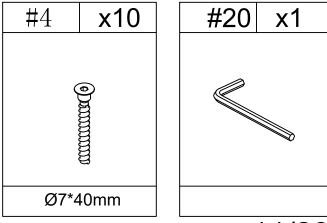



11/29


ASSEMBLY INSTRUCTIONSSTEP-5


1.Prepare the leg racks. Align the holes of the N&O part with the holes of the P part. Place the gasket #22 on the screw #10, insert the screw #10, and tighten the screw #10 with the allen key #20.


Align the holes of part P, insert the bolt #19, and bolt the middle foot



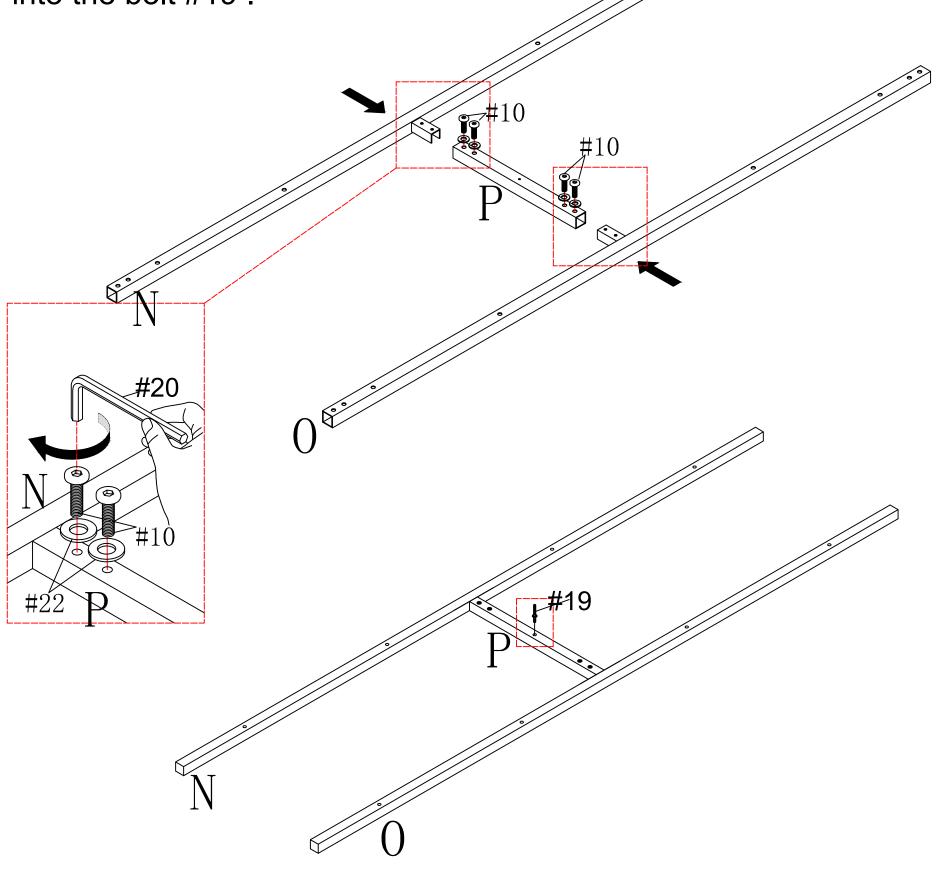

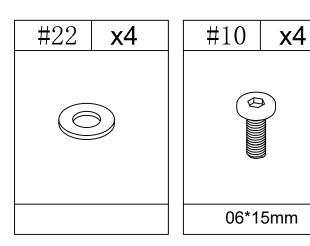


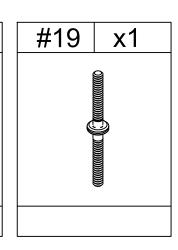

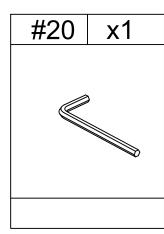


STEP-6


1.Prepare the leg racks. Align the holes of the M part with the holes of the N&O part, Place the gasket #22 on the screw #10, insert the screw #10, and tighten the screw #10 with the allen key #20.

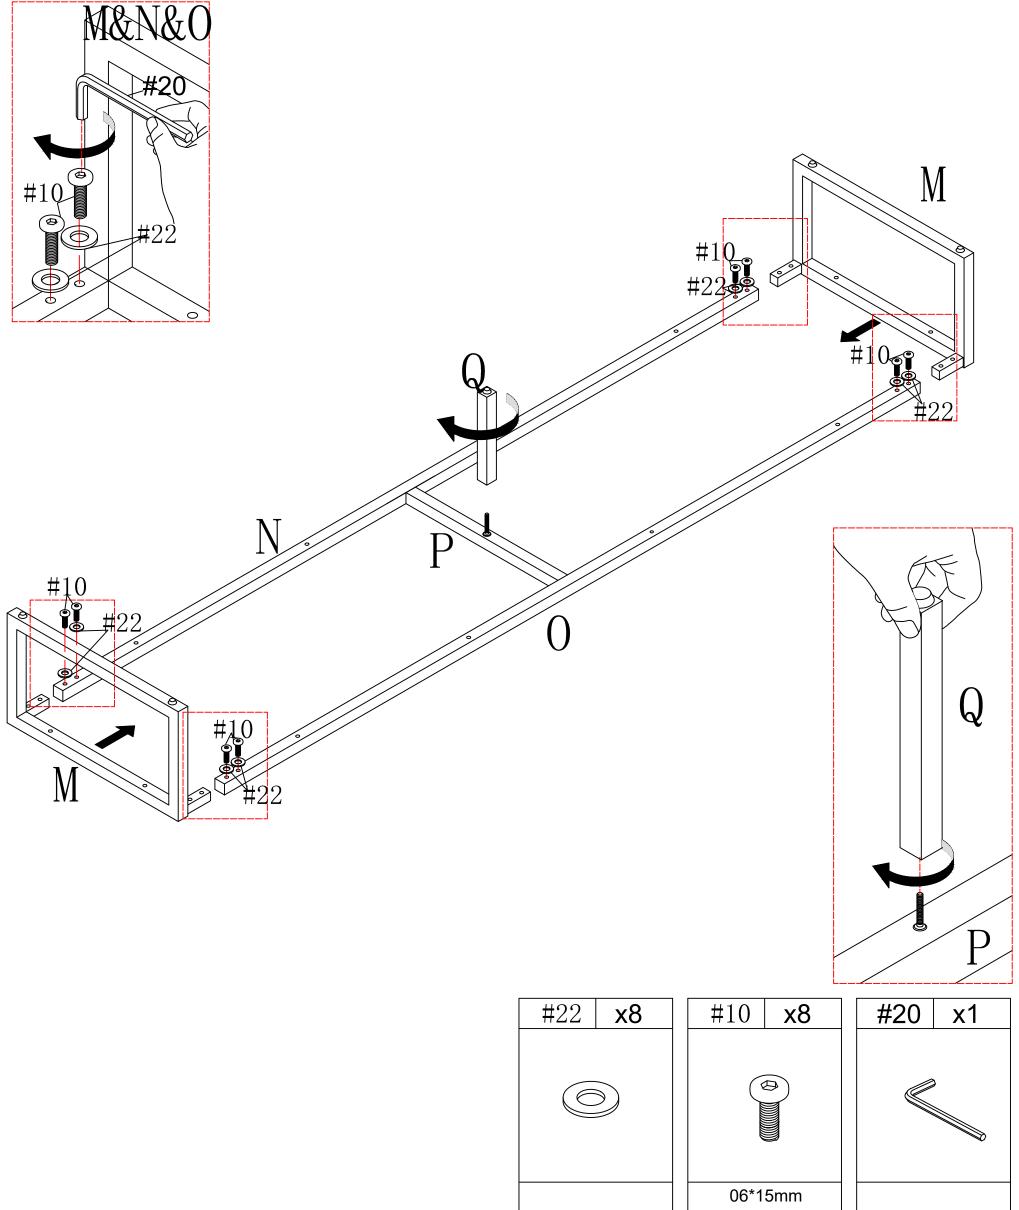


STEP-7

1.connect the leg frame to the cabinet. Place the gasket #22 on the screw #11. Attach the leg frame to the pre-assembled unit in step 4 with a screw #11 and tighten #11 with a allen key #20.

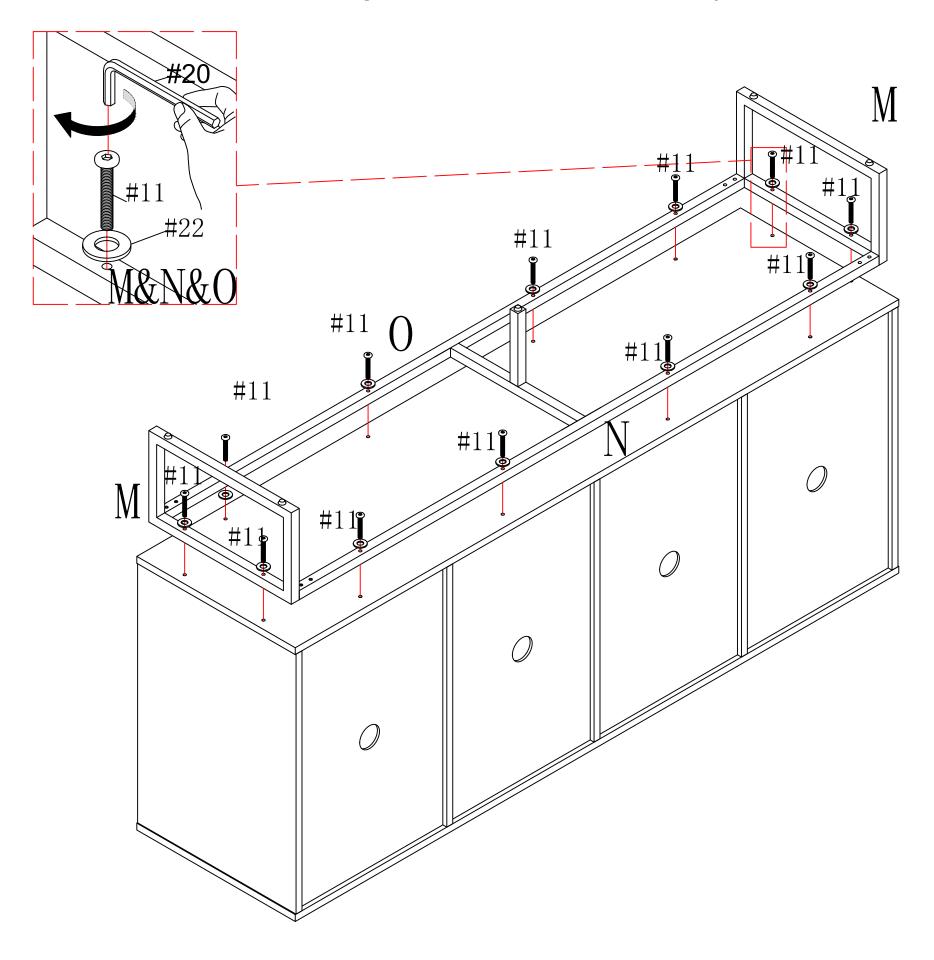

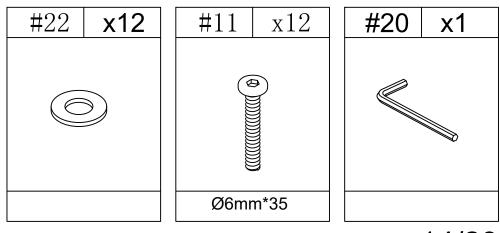


ASSEMBLY INSTRUCTIONS STEP-8

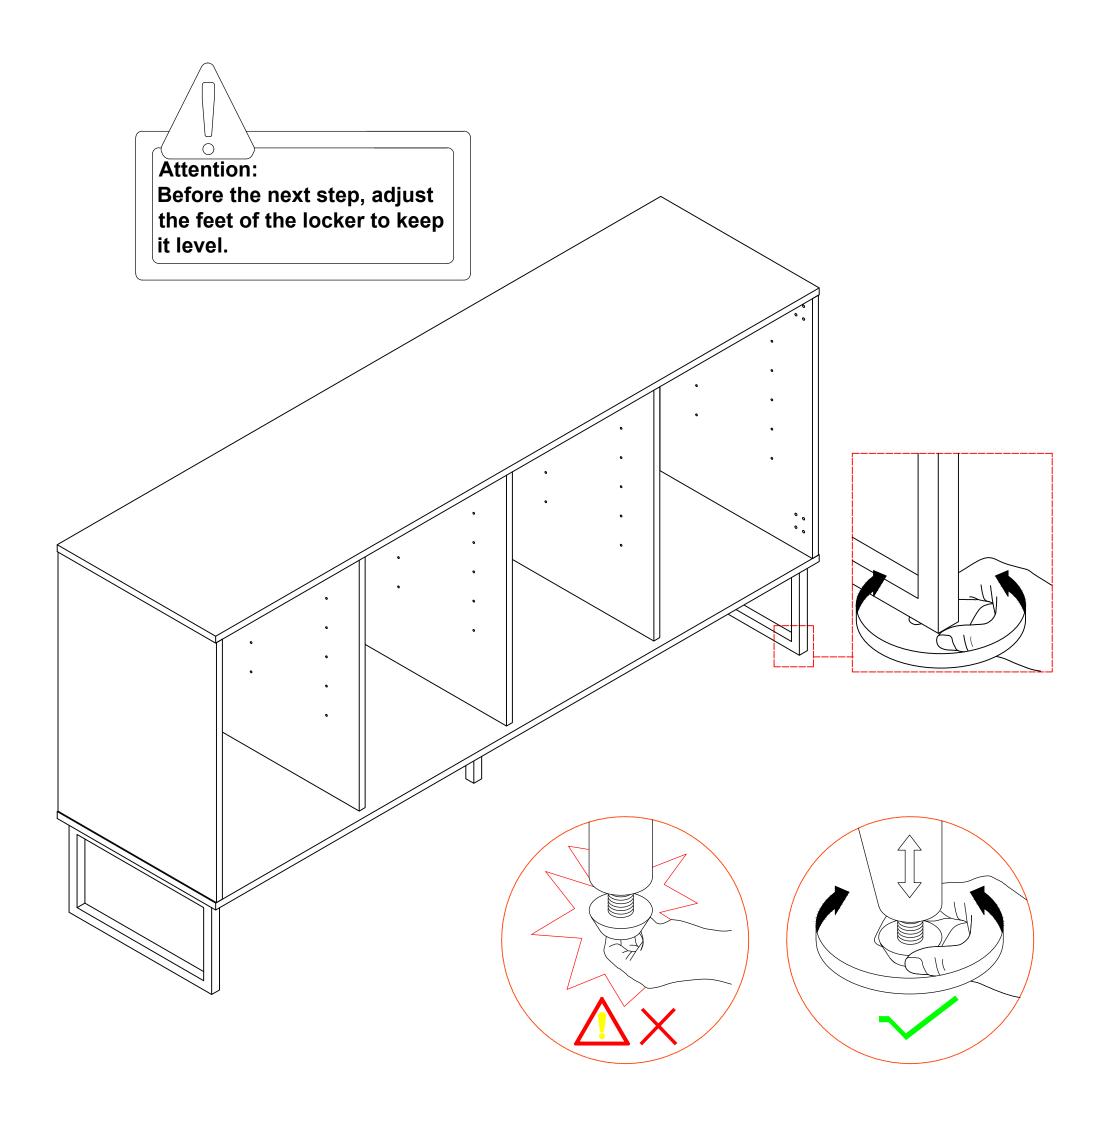


STEP-9

1.Insert hardware #7 into part K&L as shown, screw in screw #6 using screwdriver #21 and tighten fully.

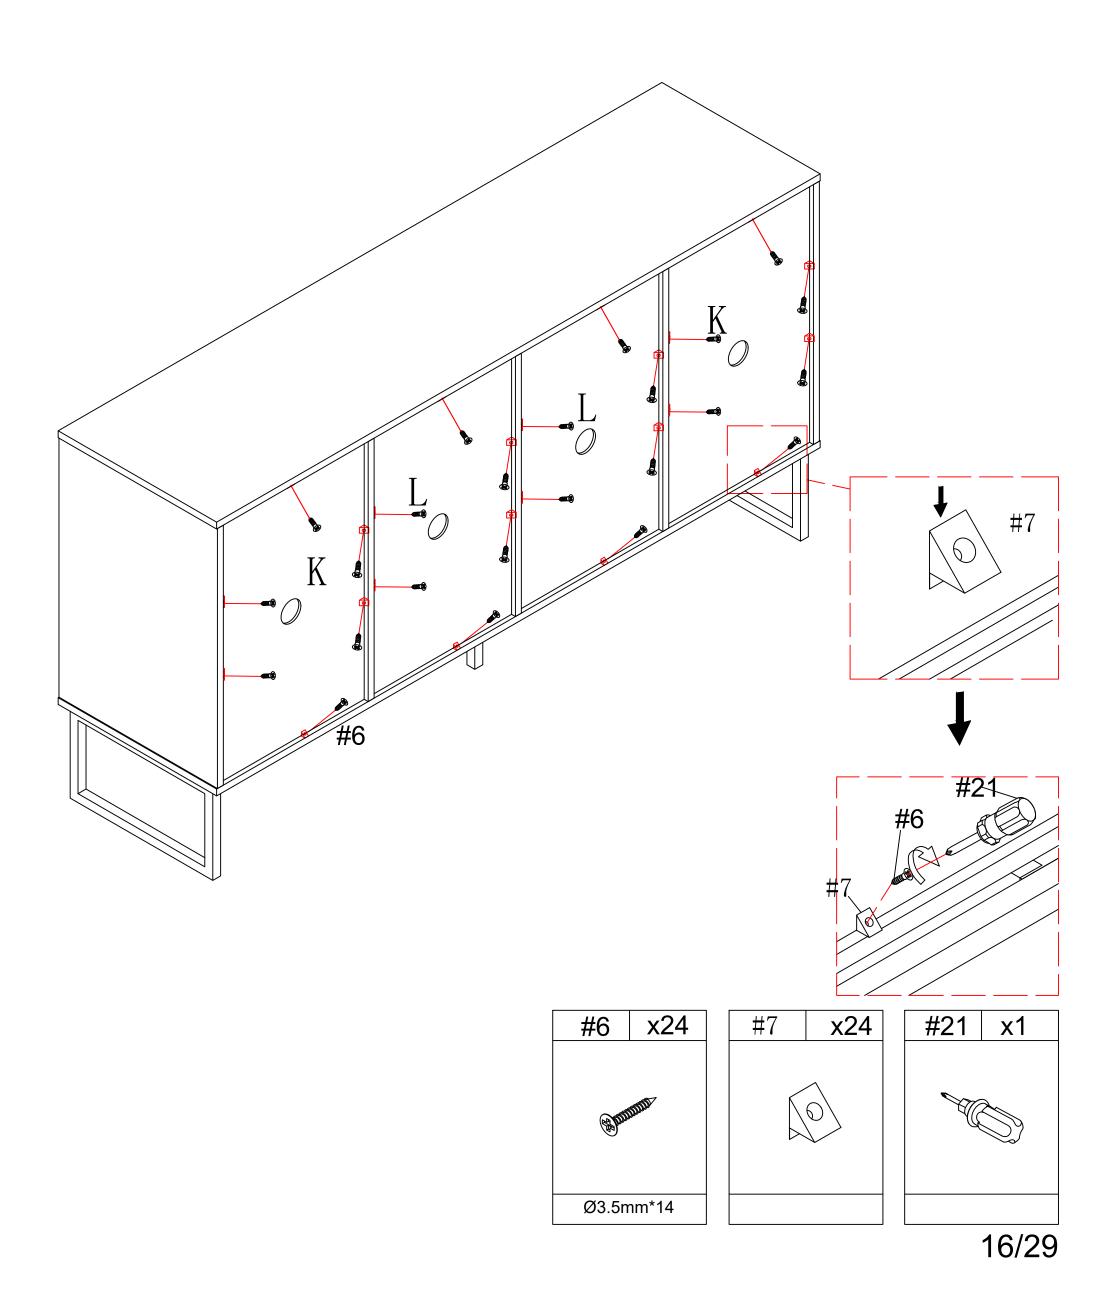


STEP-10


1.Use screw #6 to attach the hinges #8 to door panel (I&J), tighten screws #6 with screwdriver #21.

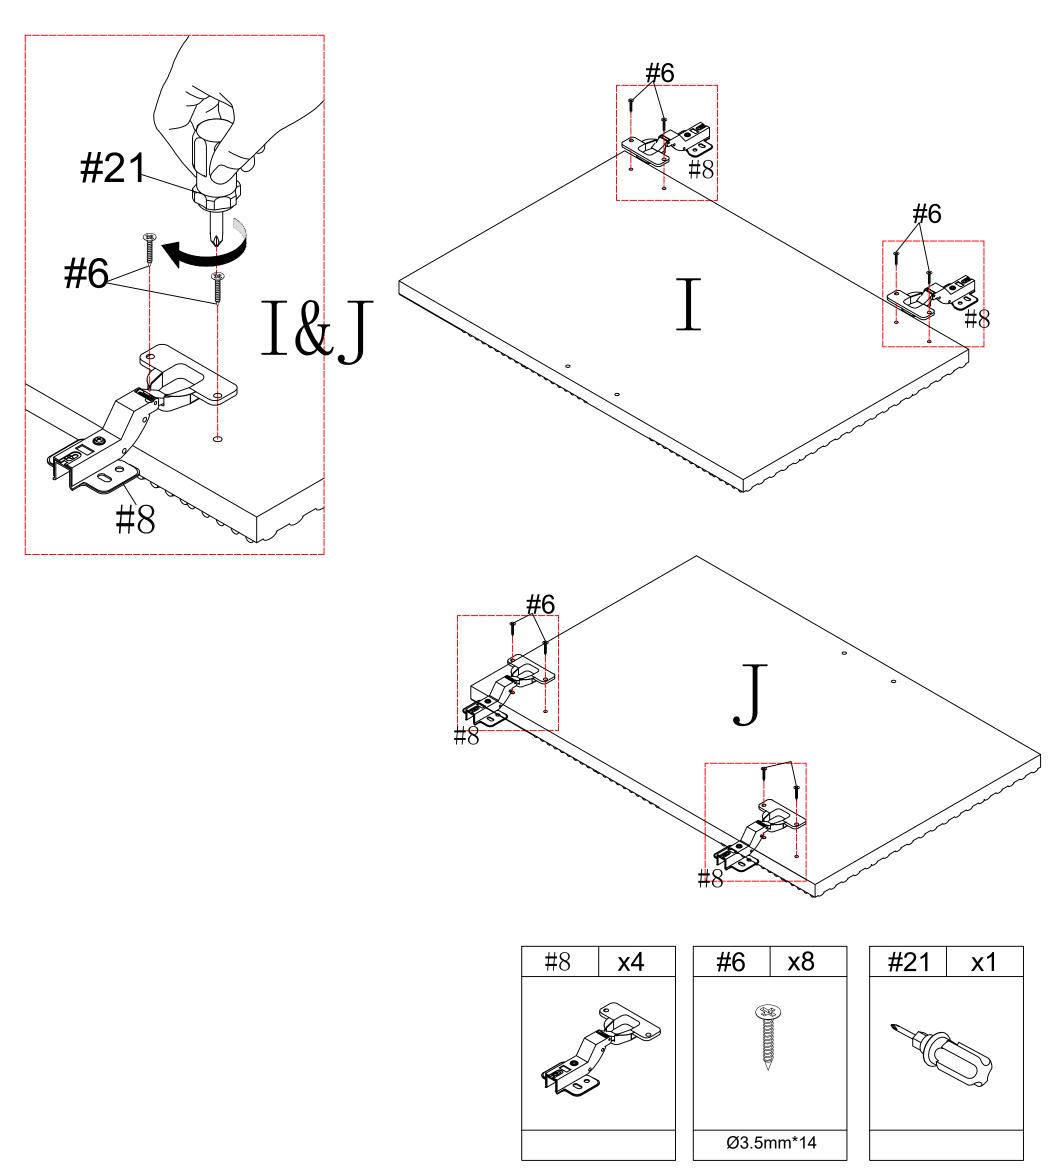


STEP-11

1.Use screw #6 to attach left door (I) and right door (J) to pre-assemble unit at step 9 ,tighten screw #6 with screwdriver #21 .

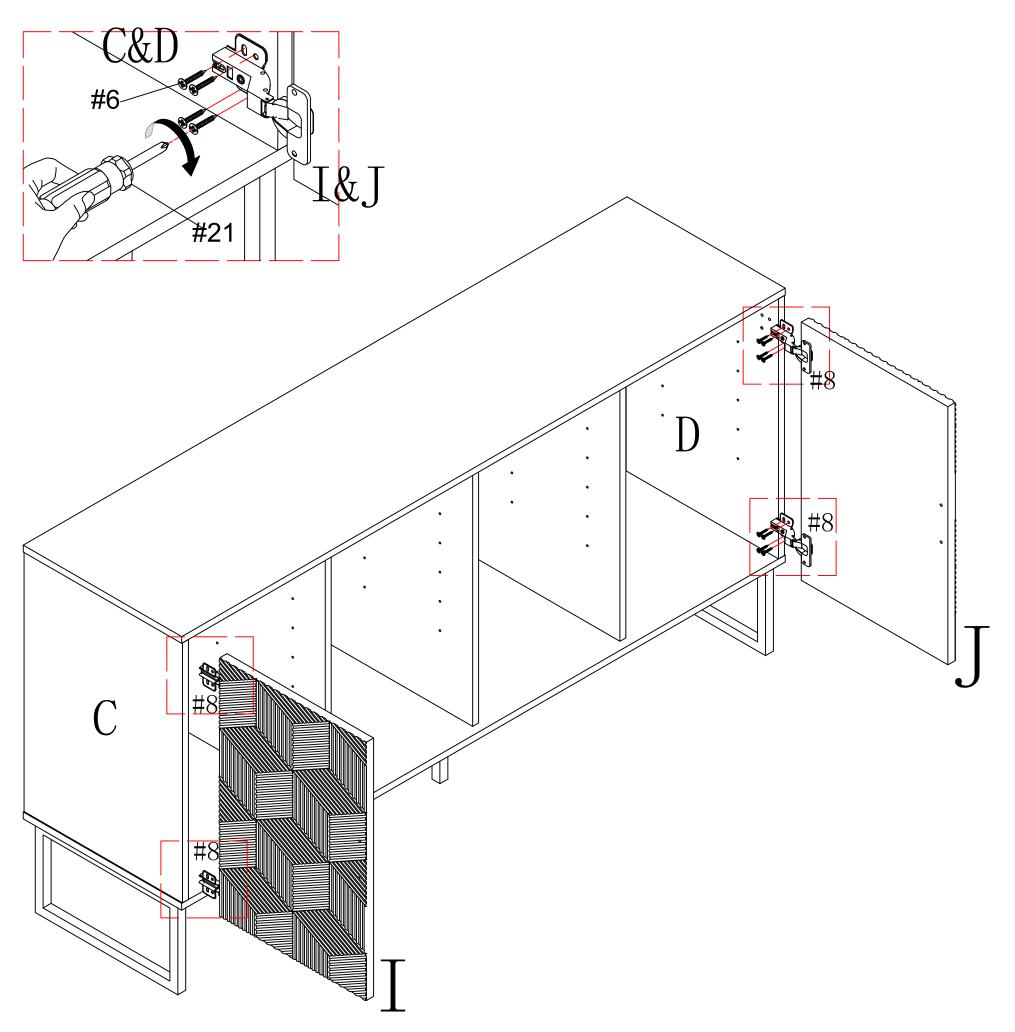


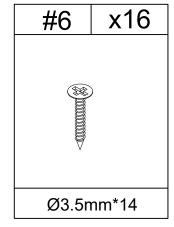

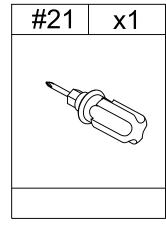


STEP-12


1.Use screw #6 to attach the hinges #9 to door panel (I&J), tighten screws #6 with screwdriver #21.

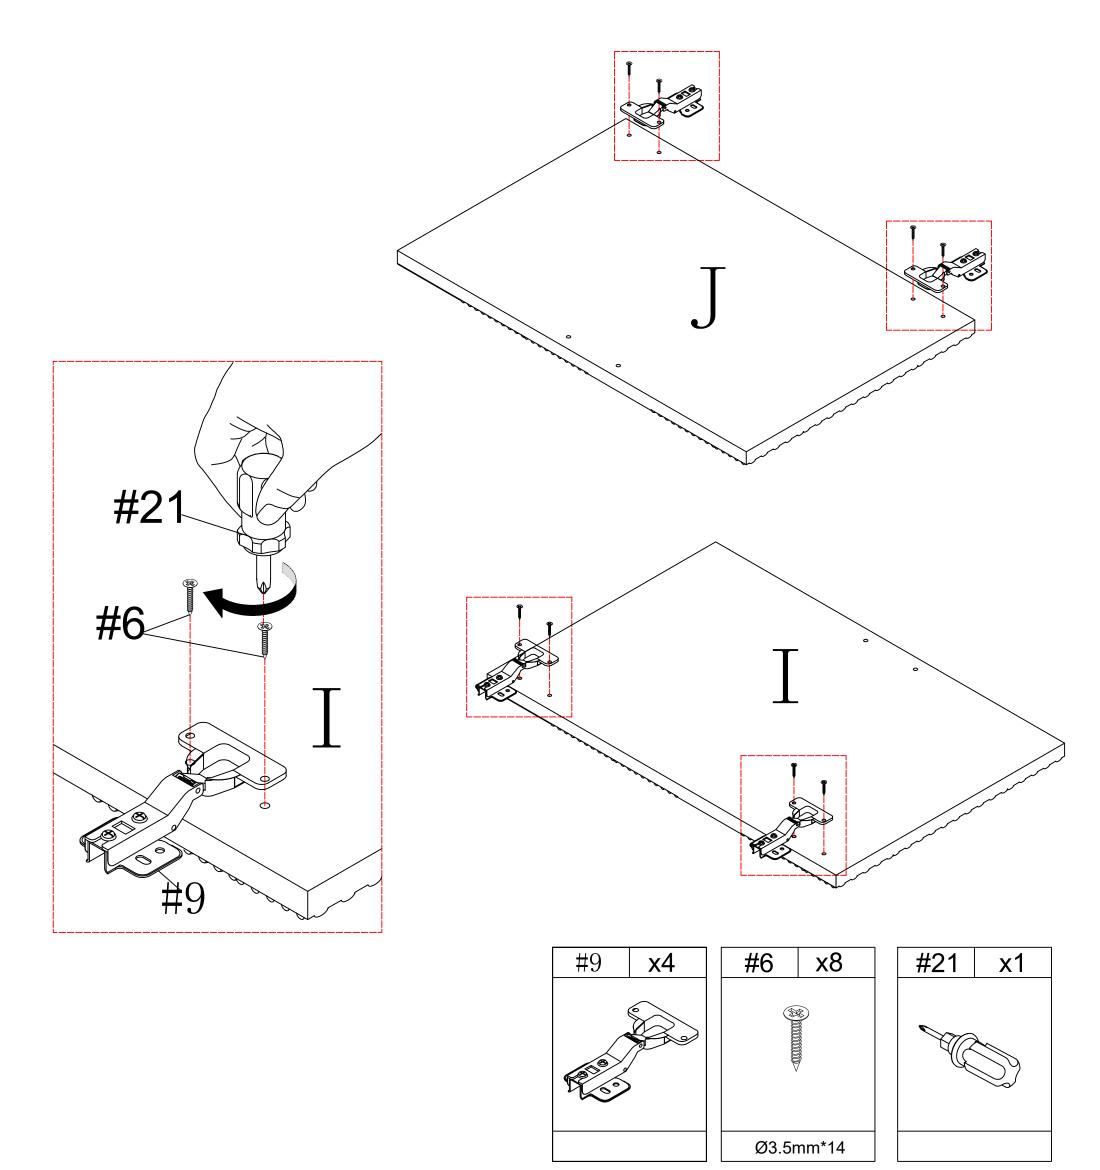


STEP-13

1.Use screw #6 to attach middle door (J) to pre-assemble unit at step 11 ,tighten screw #6 with screwdriver #21 .

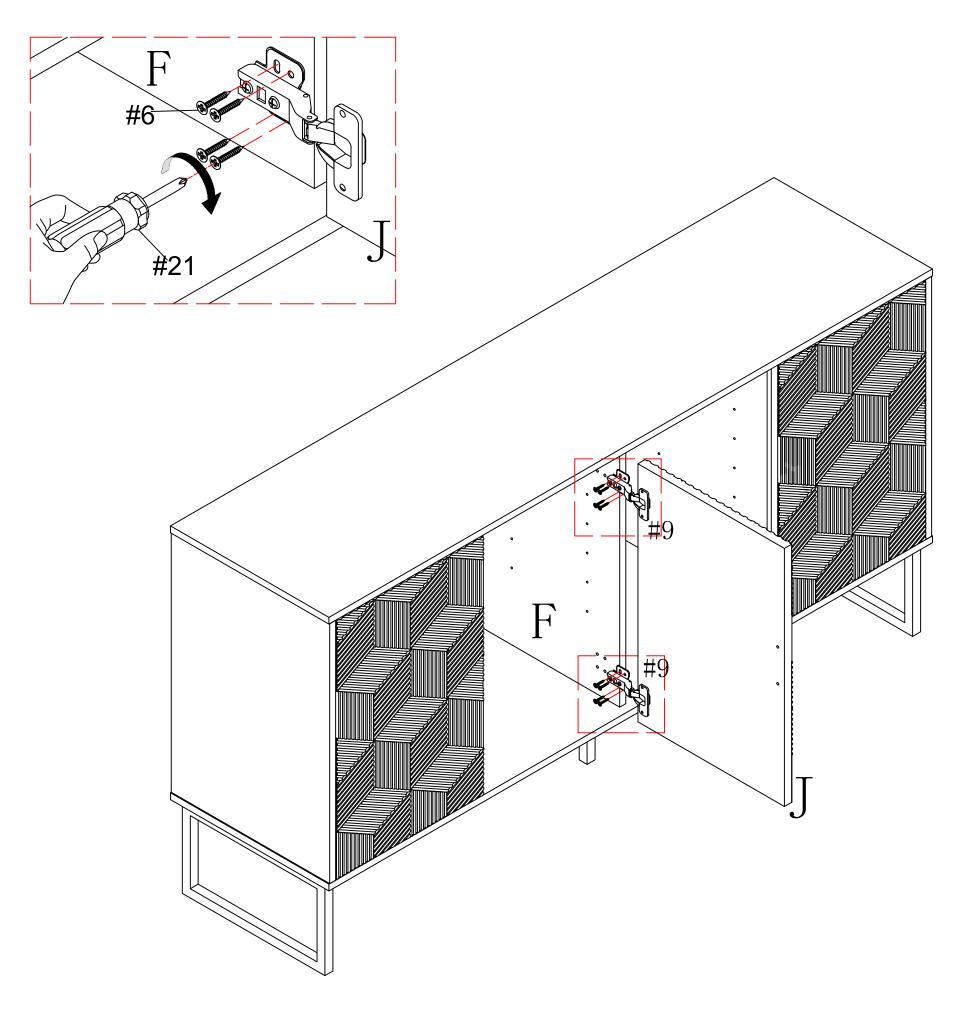


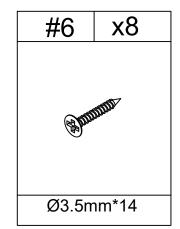

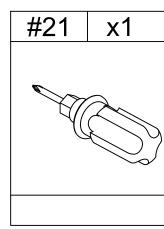


STEP-14

1.Use screw #6 to attach middle door (I) to pre-assemble unit at step 13 ,tighten screw #6 with screwdriver #21.

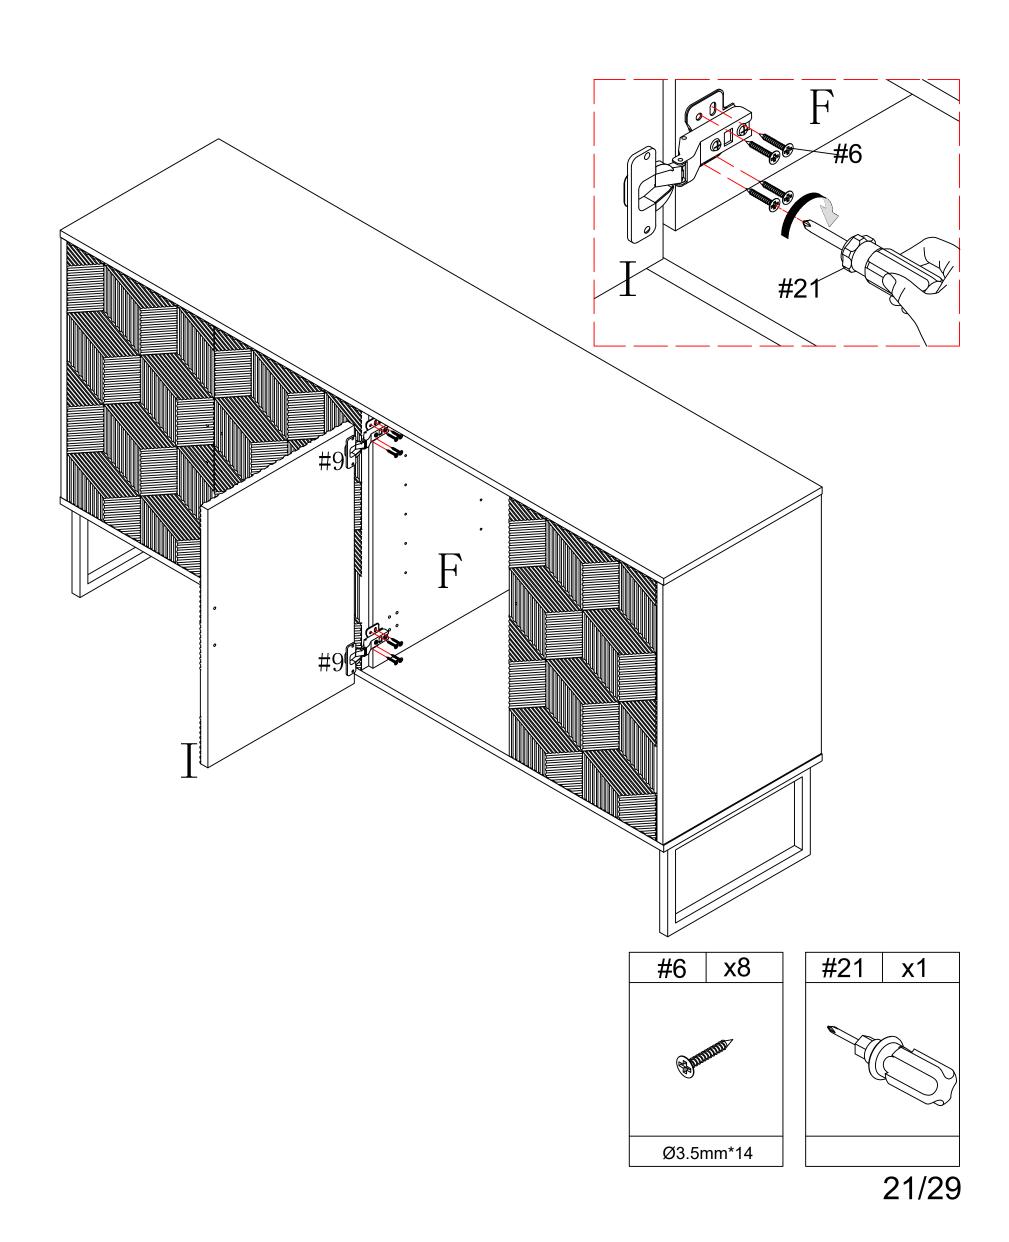


STEP-15

1.Use bolt #5 to attach handle #12 to door panel (I), tighten bolts #5 with screwdriver #21.

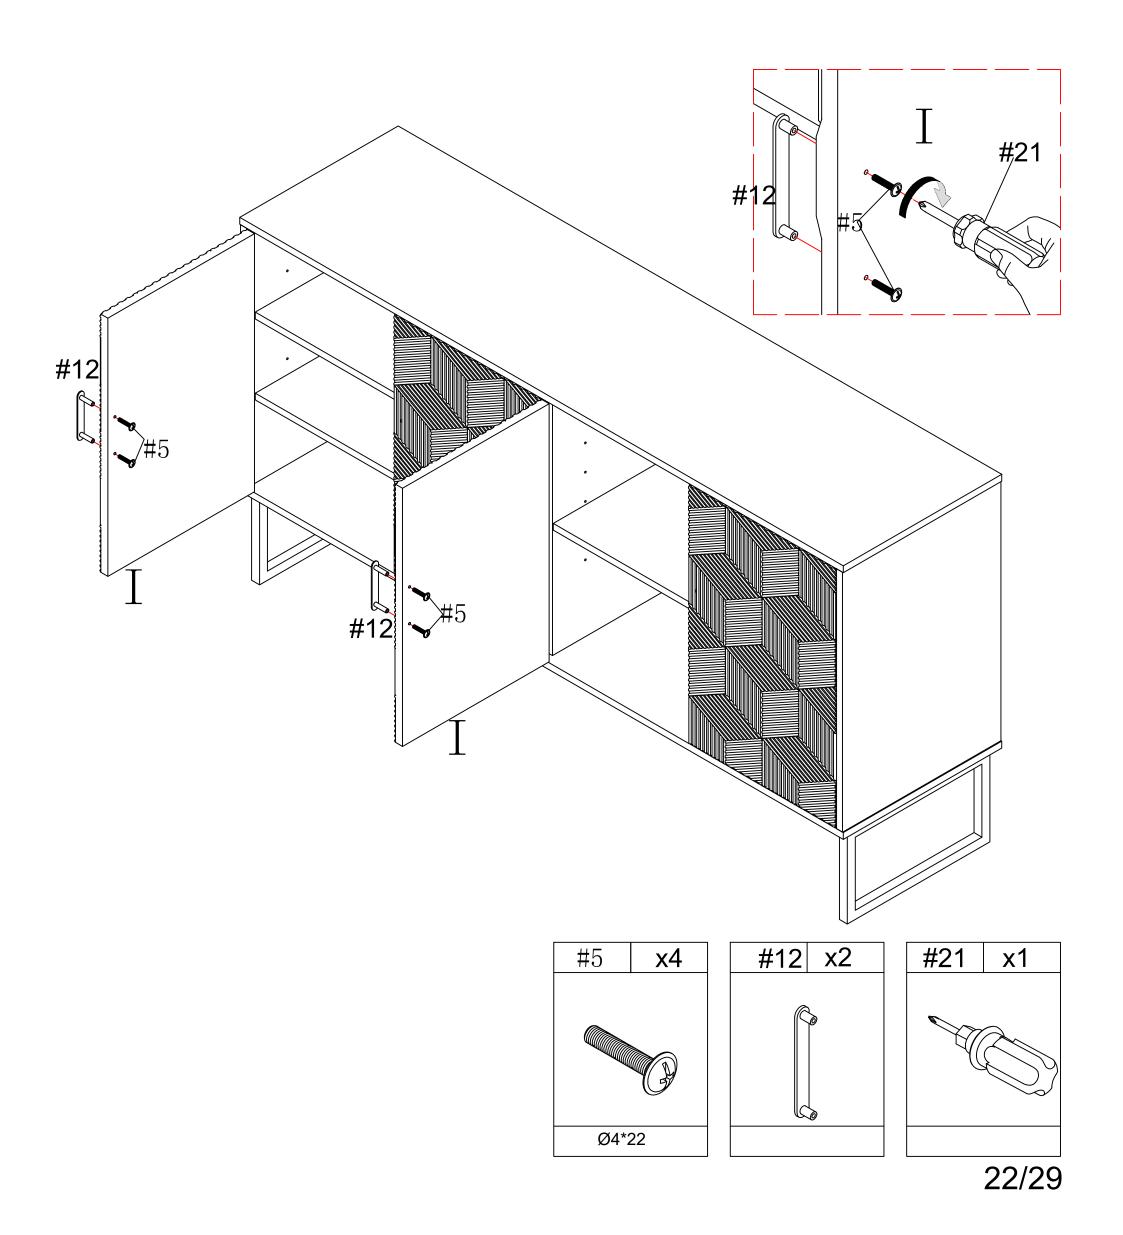


ASSEMBLY INSTRUCTIONS STEP-16

1.Use bolt #5 to attach handle #12 to door panel (J), tighten bolts #5with screwdriver #21.

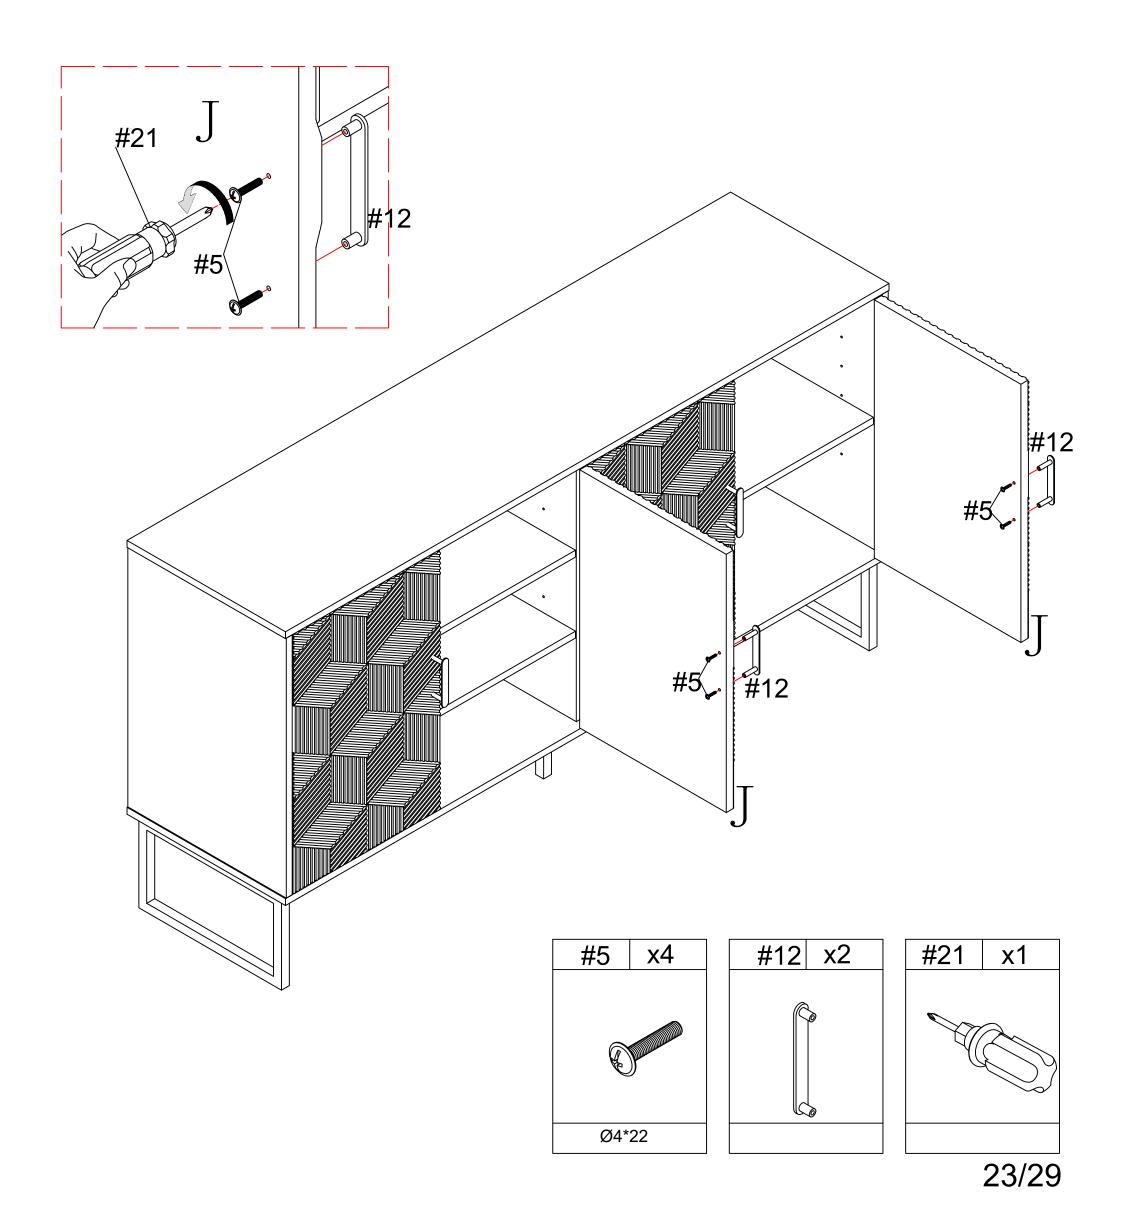


STEP-17

1.Insert shelf pin #14 into pre-assemble unit at step 16. attach adjustable shelf G&H to pin #14.

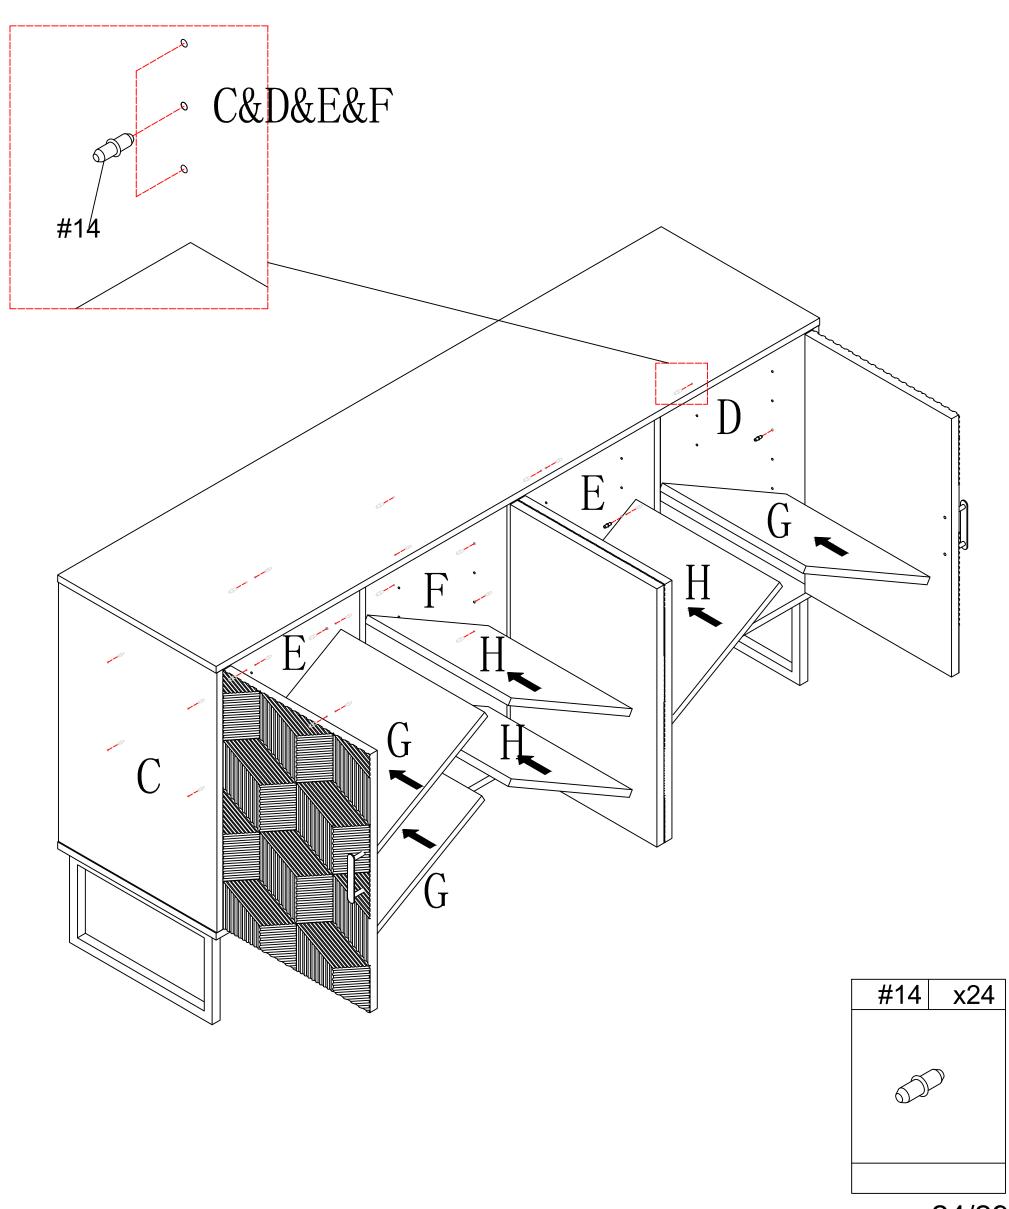


ASSEMBLY INSTRUCTIONS STEP-18

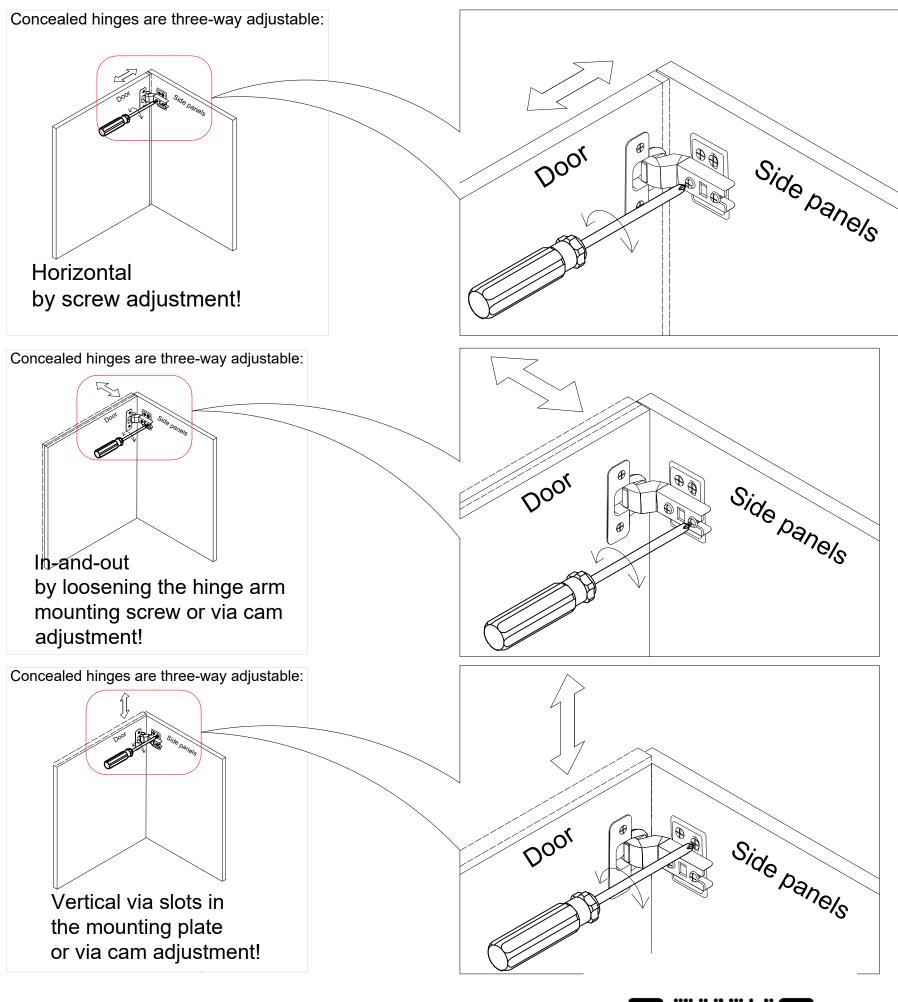




Video for door adjustment


Hinge adjustment method

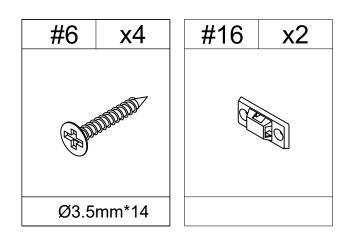


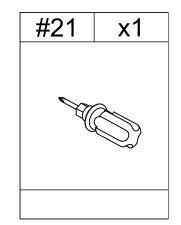


STEP-19

1.Use screw #6 to attach part #16 to pre-assemble unit at step 17 , tighten screws with screwdriver #21.

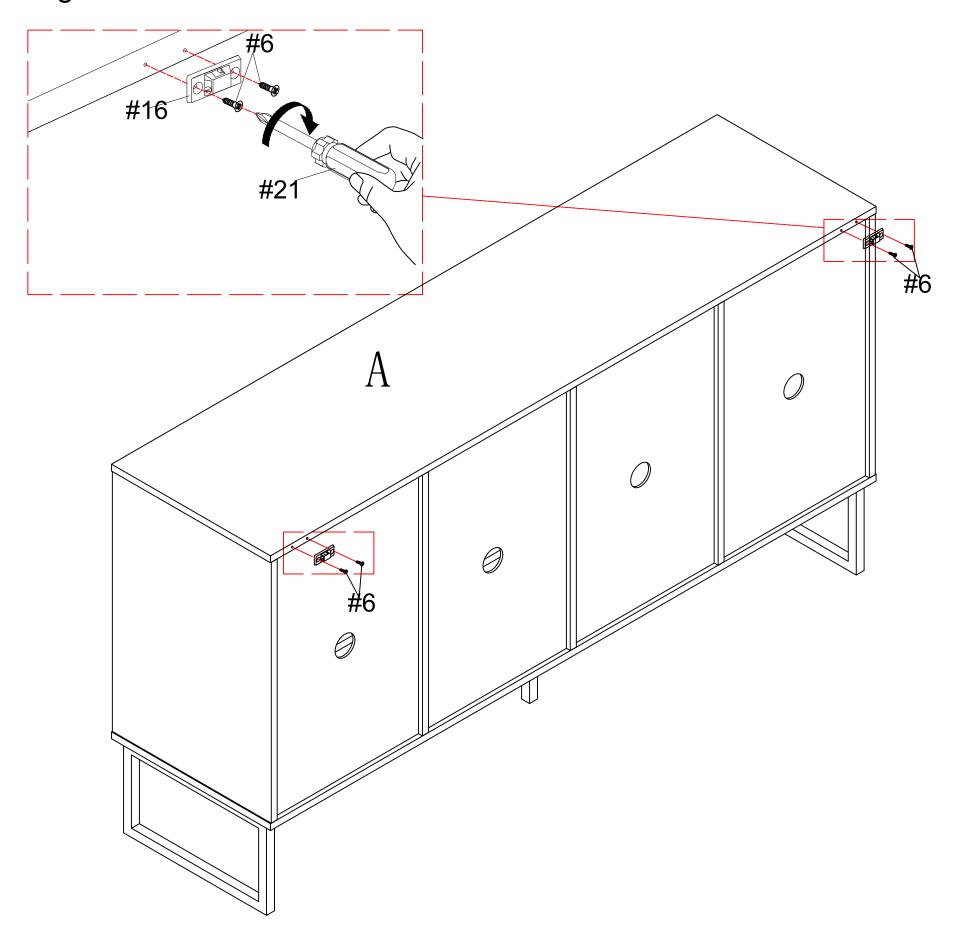


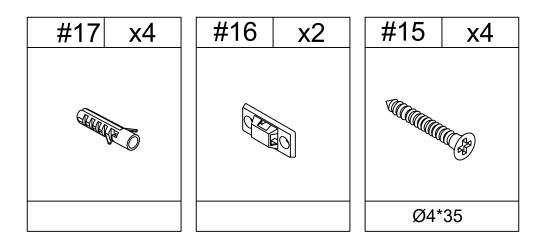


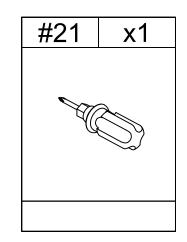

STEP-20


- 1.Install the anti-collapse device.
- 2.Mark the position on the wall, that corresponds to the location of part#16 on the of panel (A); Drill and insert the expandable screw #17 by hammer.
- 3.Assemble the part #16 to the wall. Align the hole in the part #16 with the expandable screw #17, use screw #15 to attach it and tighten by screwdriver#21.

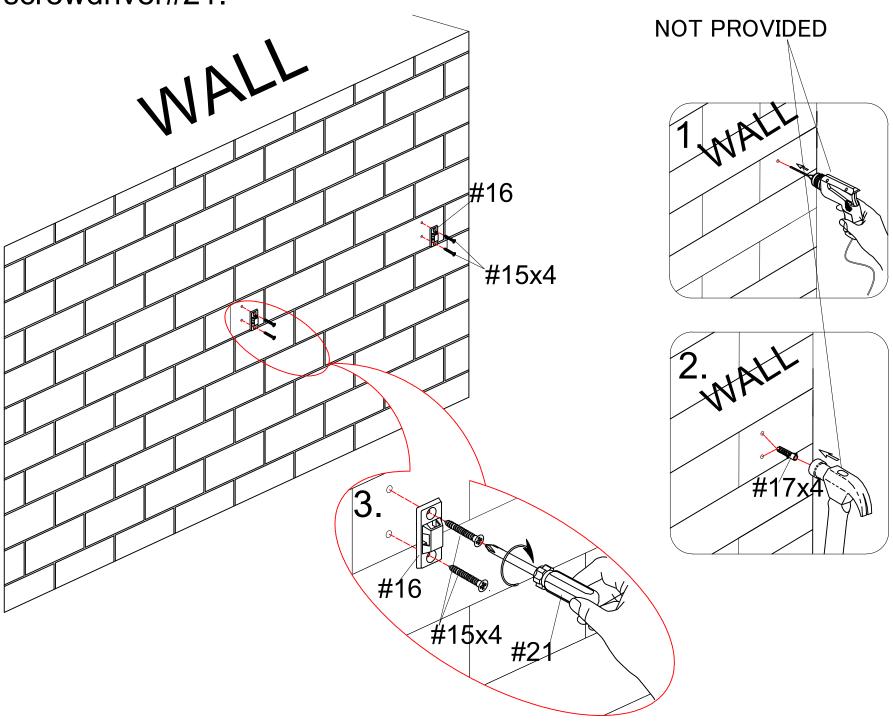

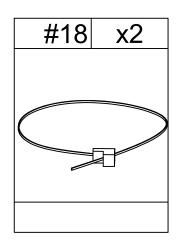

STEP-21

1.Let the plastic belt #18 pass through the both part #16 and pull tightly

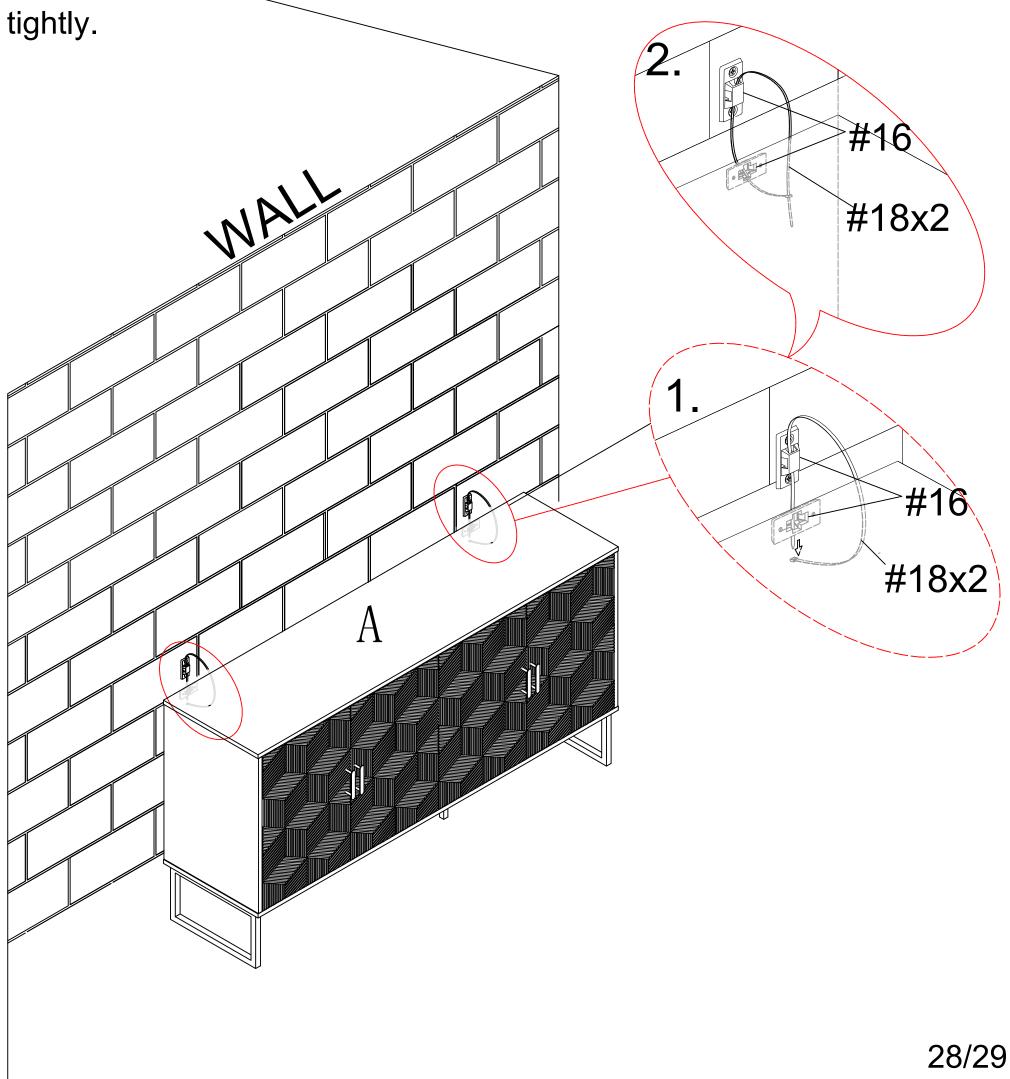

WARRANTY

- 1.We strive to offer high-quality products, and we also try our best to satisfy each and every customer that orders from us with product or service as needed.
- 2.We provide 30 days warranty starting from the time you receive the item. Each customer must provide a record of their order such as the order number, or item receipt for any items that are out of the warranty period you may also still receive.
- 3.Replacement parts by purchasing them with our company if they are available.

Are you having difficulty
With assembly? Missing parts?
Please send email with your order No to
customerservice@hulalahome.com

For return, please check the return policy with the retailer or market place you bought from.

Appreciate your purchasing from us. Pop up your life by our furniture piece!