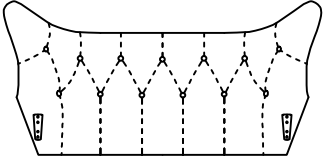

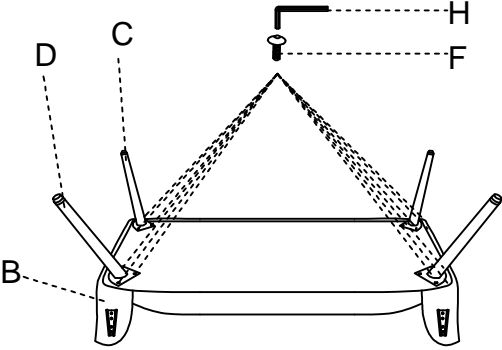
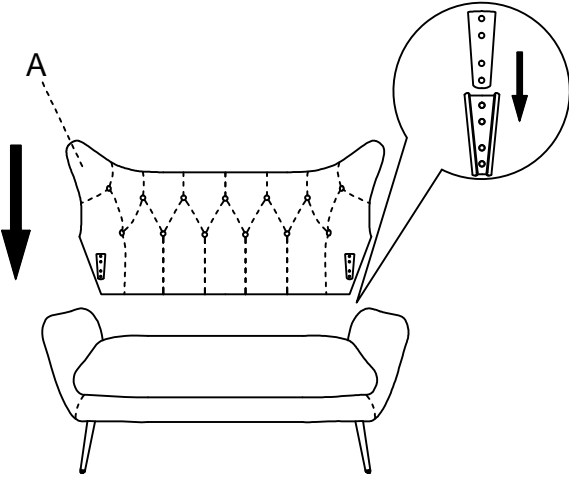






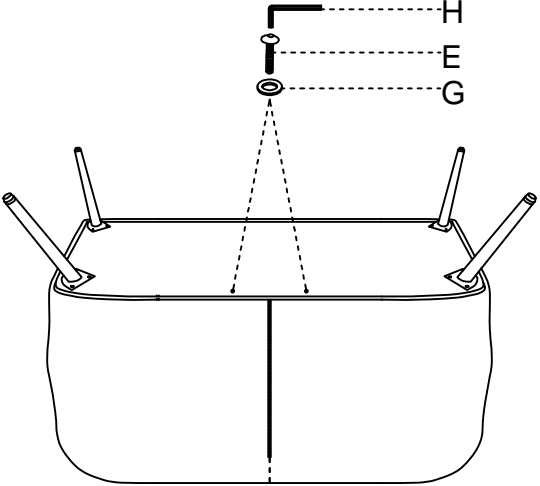
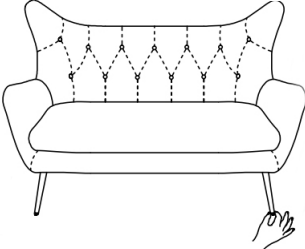




Assembly Instructions

Item No:SFDT0272

<p>A*1</p> 	<p>E*2 M6*40mm</p> 	<p>① Place the Seat B on a clean padded surface. Use bolt F allen key H to attach the leg C and D to bottom of the seat B.</p>  <p>WARNING Do not fully tighten the bolts until all the bolts align with the holes; please be sure you align the hole first!</p>	<p>② Carefully align male and female bracket then insert backrest A into space between armrest, push all the way down to secure.</p> 
<p>B*1</p> 	<p>F*12 M6*16mm</p>  <p>G*2 M6*16mm</p> 		
<p>C*2(FRONT)</p> 	<p>H*1 M5</p>  <p>E*1 M6*40mm</p> 	<p>③ Place the Seat B on a clean padded surface. Use bolt E, flat washer G, allen key H to connect chair back with cushion. Fasten bolts to secure.</p> 	<p>④ Assembly completed.</p> <p>WARNING</p> <p>For velvet: With help of adult partner, iron the fabric cover to stretch the wrinkles and dent mark with steam iron while necessary, please separate with a towel before ironing.</p>  <p>Attention: After installation, adjust the adjustable leveler to keep the chair balanced. Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.</p>
<p>D*2(BACK)</p> 	<p>EXTRA PARTS</p> <p>F*1 M6*16mm</p>  <p>EXTRA PARTS</p>		